<u>WM-01</u> wiegand meter



Email: support@entraaccess.com Ph: 604-312-9910





HOME SCREEN

The Home screen Allows you to Navigate the WM-10 Meter. By touching One of the four function button.

The OFF Button turns off WM-01 Wiegand Meter.

SLEEP & AUTO POWER OFF

If the WM-01 Wiegand Meter screen has not been touched for 2 MINUTES the WM-01 Wiegand Meter will go to SLEEP.

To wake up the WM-01 Wiegand Meter touch the screen again.

If another 3 MINUTES elapses with out a touch, WM-01 Wiegand Meter will TURN OFF.



Capture Wiegand Screen

The Capture Wiegand Screen, displays the Wiegand Data Received

Card: The Wiegand Card Number Received.

- Fac: The Wiegand Facility Code Received.
- Bits: The Number of Wiegand Bits Received.
- D0: The Number of DATA0 Bits Received.
- D1: The Number of DATA1 Bits Received.

If the Value of D0 or D1 is equal to 0 (Zero), that indicates that you have an open circuit On the D0 or D1 signal wire. (Note: you will probably also get an UNKNOWN FORMAT On the Screen.

The following Card formats will Dipslay the full Info above:

- 1) 26 Bit Standard
 2) 34Bit (H10306) ICT
- 3) 36Bit Keyscan 5) 35Bit Corporate1000

4) 39Bit Kantech XSF

5) 35Bit Corpoeate10006) 50Bit RBH

All other card Formats will display UNKNOWN FORMAT FOR Card and Fac data But, Bits, D0 & D1 values will be correct.

Other formats may be available Please Contact us for Info

<u>WM-01</u> WIEGAND METER



SEND WIEGAND SCREEN

The Send Wiegand Screen, consists of 2 screens. The Screen on the left appears when the Send Wiegand Button is pressed on the Home screen. Touching the more button calls up The screen on the right.

By touching any one of the Green Buttons will cause the WM-01 Wiegand Meter to Send Out that Wiegand format out the WIEGAND OUT Port on the Wiegand Meter.

Note: The Card Number that will be sent is always <u>9999</u>, Except for the Kantech which will be <u>8884</u>.

Home Button:	Will return you to the Home screen
More Button:	Will move you to Send Wiegand Screen2 (on the right)
Back Button:	Will return you to the screen on the Left.
OFF Button:	Turns the WM-01 Wiegand Meter OFF





SEND RS232 SCREEN


The Send RS232 Screen, provides the ability to send RS23 Serial String to mimic an SES TEC/Cat Intercom, an SES TEC1 Intercom or an Identiv Intercom system.

By clicking on one of the three touch buttons, the WM-01 Wiegand Meter will send the appropriate RS232 string out the Serial port of the WM-01 Wiegand Meter.

HOME Button:Returns you to the Home ScreenBAUD Button:Opens the Baud Screen, allowing you to set the Baud rateOFF Button:Turns Off the WM-01 Wiegand Meter.



<u>WM-01</u> WIEGAND METER

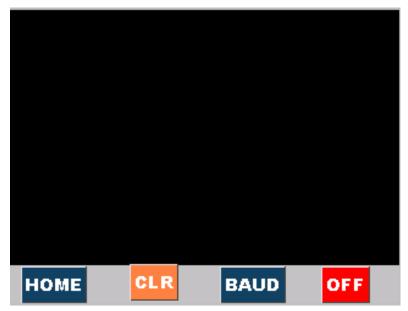


CAPTURE RS232 SCREEN

The Capture RS232 Screen displays the RS232 Data Received from the WM-01 Wiegand Meter .

HOME Button:	Returns you to the Home Screen.
CLR Button:	Clears the display screen.
BAUD Button:	Opens the Set Baud Screen.
OFF Button:	Turns the WM-01 Wiegand Meter OFF.

The Default Baud Rate is 9600.

RS232 Port Connections; Identiv Intercoms : RX to WM-01 RX, GND to WM-01 GND SES Intercoms : TX to WM-01 RX, GND to WM-01 GND

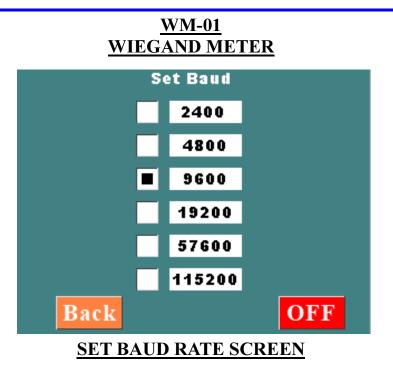

The set Baud Rate Screen, allows you to change the Baud rate to send or capture RS232 Data.

By clicking the appropriate check, will change the Baud rate of the <u>WM-01 Wiegand</u> <u>Meter RS232 Serial Port.</u>

Back Button: Returns you to either the Send RS232) Capture RS232 Screen. **OFF Button:** Turns the WM-01 Wiegand Meter Off



WM-01 Wiegand Meter Specifications		
Power Supply	2 x AAA Alkaline Batteries	
Current	60ma Normal, 32mA Sleep	
Dimensions	117mm L x 63.5mm W x 22.9mm H	
Weight	240 grams	
Default Baud Rate	9600	
Connections	3 x 3.50mm /1/8", Mini Stereo Jacks	
Interface	1 x Wiegand Out, 1 x Wiegand In, 1 x RS232 Port	
Warranty	1 Years against defects in Materials & Workmanship	

WM-01 Wiegand Meter Includes

- 1 x WM-01 Wiegand Meter
- 4 x AAA Alkaline Batteries
- 2 x 3.5mm(1/8") Stereo Plugs
- 1 x 3ft, 3.5mm Male Straight to Male Right angle Cable.